


- I. Negative Ignition --- F/F?
- No --- 16% switch or Ignition C/B
 - Yes --- LM, when did fuel drain?
- Fuel Drain
- Continuous --- Ignition relay or drip valve --- MX
 - After stop-start --- Ignitors or spray pattern --- try enrichment
- II. Negative Secondary Pump Pressure Lite --- TIT Drop?
- Yes (2 good pumps and a valve) --- Bulb, C/B, pressure switch
 - No --- Secondary pump or valve --- MX
- III. Secondary pump pressure lite remains ON --- TIT drop?
- Yes --- Pressure Switch --- MX
 - No --- Pull Ign Control C/B
- Lite out --- 65% switch --- FLY
- Lite on --- Primary pump or valve --- MX

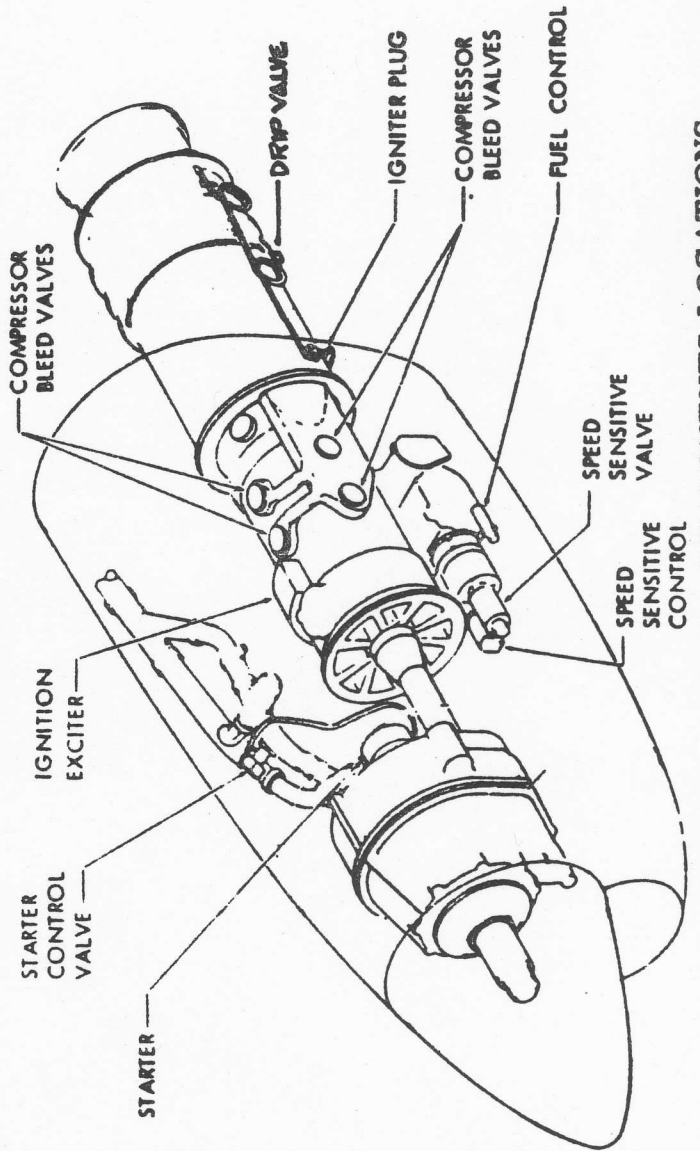

ENGINE STARTING SYSTEM COMPONENTS LOCATIONS